


Doormark Hinge Boring Program


Doormark offers you the option of having hinge holes bored in your cabinet/closet doors. This feature will allow you to take your doors directly to the job site.

There are two hinge boring patterns to chose from. (*see order form*)

Pattern 1 is a single 35mm hole drilled at a depth of 1/2" (12.7mm)

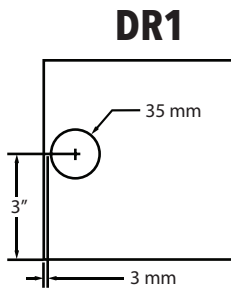


Pattern 2 has one 35mm hole and two 8mm holes for dowels drilled at a depth of 1/2" (12.7mm)

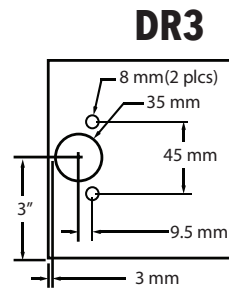


Standard hinge placement.


8" up to 13"

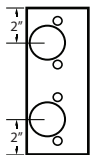

13" up to 36"

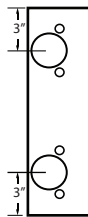

36" up to 60"

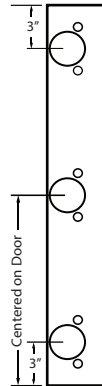


60" up to 96"



When ordering cathedral or arch style doors, any doors with finger pulls or a Biscayne style door, you will be required to select between a right edge hinge placement or a left edge hinge placement.

(*see order form*)

Left Bore

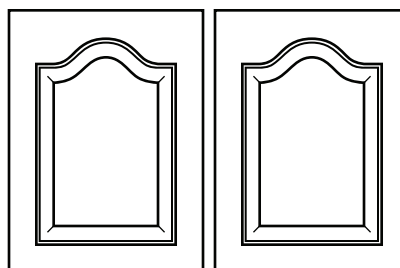

Right Bore